



MondoTalk Wholesale Guide - How to set incoming and outgoing channels

1. Right click on the sub account and open in a new tab.

Account: 8340839

Your username is for logging in and cannot be changed.

SIP ID: 8340839

API Key:

SIP Status: *NA*

Creation Date: 2017/02/24 01:17

Sub	NAME	EMAIL ADDRESS
8340839	WH Child 1	christian@staff.mondotalk.com
8341003	WH Child 2	christian@staff.mondotalk.com
8341273	WH Child 3	christian@staff.mondotalk.com

A context menu is overlaid on the first row of the table, with the option "Open link in new tab" circled in red. The menu also includes "Open link in new window", "Open link in incognito window", "Save link as...", "Copy link address", and "Inspect" (with a keyboard shortcut of Ctrl+Shift+I).

2. Go to SIP Management Tab, change/edit the incoming and outgoing calls then click Save.

Account Management

Profile **SIP Management** Features Call Plan

SIP ID: 8340840

SIP Pass: tH09xuwP

Ring time (sec): 60

Max. incoming Calls: 4

Max. outgoing Calls: 4

SIP DTMF: Auto

Codec(s): g729;ulaw;alaw;gsm

Selected CallerID: 0399997777

Do you want to forward your call? Unconditional Forward

Do you want to enable video support?

Do you want to restrict the SIP Registration? ip

Save