

MondoTalk - Yealink Manual Registration

- 1. Start up your Yealink IP phone and identify its IP address. To find your phone's IP address, simply press the OK key on the phone.
- 2. Point your browser to the web interface of your Yealink phone by entering the IP address in your web browser (please note that the phone and computer must be using the same network).
- 3. Enter your phone's login credentials username and password is admin by default
- 4. Click on the **Account** tab. You'll now be taken to the Account configuration page as shown above

	Log Ou				Log Out
	Stature Account Notwar	DEEKow	Easturer Co	ttinge	Directory
	Status Account Netwo	DSSRey	reatures se	ungs	Directory Security
Register	Account	Account 1	~		NOTE
Pacie	Register Status	Disabled		Dicolay Name	
DdSIC	Line Active	Disabled	v 0		SIP service subscriber's name
Codec	Label	 display. 	display.		
Advanced	Display Name		0		Register Name
	Register Name		0		for authentication.
	User Name		0		User Name
	Password		0		service provider.
	Enable Outbound Proxy Server	Disabled	. ⊘		NAT Traversal Defines the STUN server will be
	Outbound Proxy Server		Port 5060	0	active or not.
	Transport	UDP	v 0		
	NAT	Disabled	v ()		
	STUN Server		Port 3478	0	
	SIP Server 1 🕜				
	Server Host		Port 5060	0	
	Server Expires	3600	0		
	Server Retry Counts	3	0		
	SIP Server 2 🕜				
	Server Host		Port 5060	i0 🕜	
	Server Expires	3600	0		
	Server Retry Counts	3	0		
	our a may courte				

- 5. Enter the following details:
 - a. Line active: Set to enabled
 - b. Label: Enter your desired label
 - c. Display name: Your desired display name
 - d. Register name: Enter the MondoTalk SIP account or extension username.

- e. Username: Enter the MondoTalk SIP account or extension username.
- f. Password: Enter the password of the account above.
- g. Server / Host: Enter the appropriate server below:
 - i. SIP accounts = sip99.mondotalk.com
 - ii. PBX extensions = cloud-pbx-01.mondotalk.net

Please leave the rest of settings in default.

6. Click confirm